


SOLID BRASS LEG TUB SHOWER ENCLOSURE SET —INSTALLATION GUIDE—

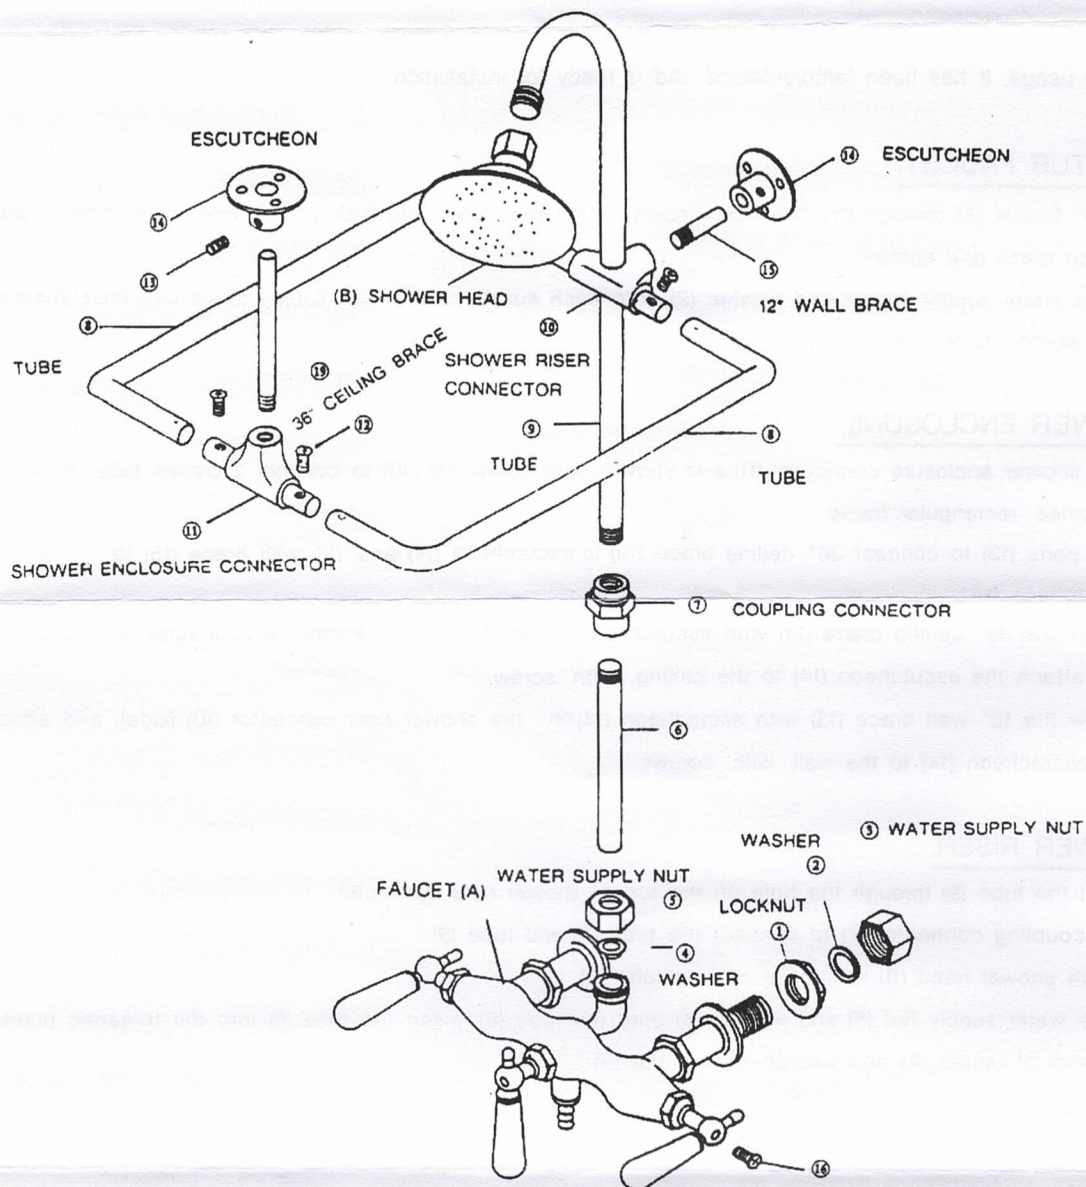

INSTALLATION INSTRUCTIONS

This bathroom fixture has been carefully engineered to provide a long, trouble-free service life under normal usage. It has been factory-tested and is ready for installation.

LEG TUB FAUCET:

1. Insert faucet (A) through the two holes inside of leg tub, screw the locknuts (1) onto the bottom of the thread pipes and tighten.
2. Place water supply nut (3) and washer (2) onto each supply tube, insert supply tubes into inlet shanks and wrench-tighten water supply nut (3).

SHOWER ENCLOSURE:

1. Use shower enclosure connector (11) and shower riser connector (10) to connect 2 pieces tube (8) to become a rectangular frame.
2. Use parts (13) to connect 36" ceiling brace (19) to escutcheon (14) and 12" wall brace (15) to escutcheon (14).
3. Screw the 36" ceiling brace (19) with escutcheon (14) on the shower enclosure connector (11) (upward), and attach the escutcheon (14) to the ceiling with screw.
4. Screw the 12" wall brace (15) with escutcheon (14) on the shower riser connector (10) (side), and attach the escutcheon (14) to the wall with screws.

SHOWER RISER:

1. Insert the tube (9) through the hole on the top of shower riser connector.
2. Use coupling connector (7) to connect the tube (6) and tube (9).
3. Attach shower head (B) to shower arm on tube (9).
4. Place water supply nut (5) and washer (4) onto the tube (6), insert the tube (6) into the threaded pipes (upward) of faucet (A) and wrench-tighten nut (5).

HOW TO CARE FOR YOUR BEAUTIFUL BATHROOM FIXTURE



We suggest the following minimum maintenance for maximum enjoyment and use of your fixtures:

All brass parts have been carefully finished before leaving the factory. After each use, wipe gently with a damp cloth and blot dry with a soft towel. Use only water to clean your faucet. Never use acids, harsh abrasives, or detergents.



KANREP NORRIS DISTRIBUTION

42 Keefer Court, Unit 8

Hamilton, ON L8E 4V4

Tel: (905) 578-4505 or 1-800-793-2793

Fax: (905) 578-1040 or 1-800-315-4452

To compensate for the backward slope on a cast iron bathtub, fix the riser in the upright position desired, with the cone washer on, but not tightened. After the wall and ceiling supports are attached, move the cone washer down to the faucet and tighten into the thread. The washer will form into the faucet elbow, pushed into that shape by the friction ring. If you need a second washer to complete the job, please call customer service at 1-800-793-2793 and we will mail you the required parts.

